

B-CONCRETE



[www.b-concrete.com](http://www.b-concrete.com)

# TILE INSTALLATION

GUIDELINES  
PLANNING  
MAINTENANCE





# GUIDELINES


---

[www.b-concrete.com](http://www.b-concrete.com)


Any qualified tile installer can install B-Concrete tiles. Our handmade tiles are installed using cementitious tile glue, similar to other types of tiling installations. Below are some general guidelines to help you achieve the best results.




Verify the integrity and load-bearing capabilities of the substrate or slab. Ensure there are no loose or brittle areas and that the wall or floor surface is structurally sound. Fill any hollow areas as needed.

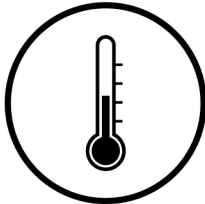

The recommended temperature range for tiling is between 10 and 32 degrees Celsius.

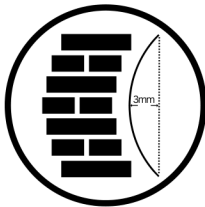

The surface should be as flat as possible, with no more than a 3mm deviation per tile length. If the surface is not flat, tile adhesive can be used to level it, but this will increase the amount of glue required and complicate the installation process.

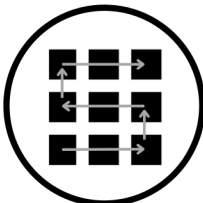

Always start tiling from the bottom. Set up a level horizontal support to fix the first row of tiles. Once the tile cement has set, the support can be removed.

---




# GUIDELINES

---

[www.b-concrete.com](http://www.b-concrete.com)



Avoid touching the tiled surface with sharp or hard objects, as they may leave marks. Use touch-up paint for cars to fix any nicks or scratches and seal the tile's surface promptly. Take care to protect the concrete surface from abrasion and scratching during installation. Avoid making pencil or pen marks on the tile faces.

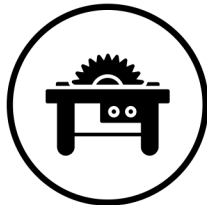

Concrete tiles can be cut using a portable angle grinder equipped with a continuous diamond blade. It is recommended to use a high-quality diamond blade for clean cuts, as cheaper blades tend to chip the edges. A concrete joint cutter can also be used for cutting tiles. After cutting, seal the exposed concrete using the provided sealer and a microfiber cloth.



Always wear clean gloves to avoid harming or staining the tiles. Maintain cleanliness of hands and equipment when handling and working with the tiles. Keep the rubber mallet hammer clean as well. Take good care of the product throughout the installation process for the best outcome.



Avoid leaving smudges on the tiles during installation. Immediately wash any adhesive or grout residue off your hands with water. Do not use abrasive sponges, strong detergents, or pastes for cleaning. Use only water and a damp towel, preferably made of cotton or other delicate textiles.



Strong chemicals or abrasive materials can damage the sealers applied to the tiles. Always use water and gentle textiles for cleaning. Do not apply masking tape or similar materials to the tile surfaces.

---





# MAINTENANCE

[www.b-concrete.com](http://www.b-concrete.com)



After installation, check exterior walls every three to six months to ensure all seams and copings are watertight and sealed. To prolong the lifespan of the tiles, apply an invisible water repellent to external walls every five years.

